


# TRE-QUATTRO

GPS L1/L2, GLONASS L1/L2, GALILEO E1 BEIDOU B1, SBAS L1, QZSS L1/L2

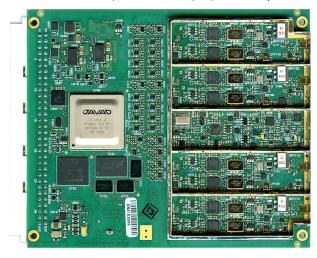

TRE-QUATTRO OEM board is based on the TRIUMPH2 technology implemented in our 864 channel chip. The board accepts inputs from up to four antennas. It is equivalent of four receivers which operate synchronously with a common oscillator and central processor to coordinate all communications and other activities. The main receiver can perform long baseline RTK in conjunction with a base. The other three receivers along with the main one can provide very fast and reliable orientation (attitude) solutions.

The on-board power supply on TRE-QUATTRO board accepts any voltage from +6 to +40 volts and delivers clean filtered voltage where needed. This eliminates the risk of power contamination (ripples) that can be created when clean power is generated elsewhere and delivered to the board via cables. TRE-QUATTRO board also includes drivers for four LEDs, ON/OFF and function button controllers. In addition, the board comes with large amount of flash for data storage.

The CAN interface in TRE-QUATTRO board is provided complete with all associated hardware and firmware, not just the CAN bus. The same is true with all the serial RS232/RS422 ports in our board. Simply stated, additional functions are not needed to incorporate any of our TRE-QUATTRO OEM board in most applications. In addition to timing strobes and event markers, the TRE-QUATTRO OEM board includes the option of complete IRIG timing system.

## TRE-QUATTRO OEM

Description	i/O	Signal name	Pin #	Pin #	Signal name	I/O	Description
Power Ground		PGND	A1	B1	PGND		Power Ground
+6.0 to +40 VDC Power Input	Ι	PWR_IN	A2	B2	PWR_IN	Τ	+6.0 to +40 VDC Power Input
Factory use only, must be left open		FU0	A3	В3	COMMSW#	Ι	Active Low Command Input (FN Button) *1
Reserved		-	A4	В4	KA_PWR	I	Keep-Alive Power input for Real-Time Clock (+4.5 to +40 VDC, 10μA typ)
External LED Control *2	0	LED2_RED	A5	B5	LED1_RED	0	External LED Control *2
External LED Control *2	0	LED2_GRN	A6	В6	LED1_GRN	0	External LED Control *2
Signal Ground		GND	A7	В7	USB_PWR	ı	USB port Power Input line
USB port D- line	I/O	USB_D-	A8	B8	USB_D+	I/O	USB port D+ line
Serial port A TXD line	0	TXDA	A9	В9	CTSA	ı	Serial port A CTS line
Serial port A RXD line		RXDA	A10	B10	RTSA	0	Serial port A RTS line
Serial port C: RS232 TXD line or RS422 TX- line	0	TXDC/TXC-	A11	B11	CTSC/RXC+	Ι	Serial port C: RS232 CTS line or RS422 RX+ line
Serial port C: RS232 RXD line or RS422 RX- line		RXDC/RXC-	A12	B12	RTSC/TXC+	0	Serial port C: RS232 RTS line or RS422 TX+ line
Serial Port D: RS232 RTS line or RS422 TX+ line	0	RTSD/TXD+	A13	B13	TXDD/TXD-	0	Serial Port D: RS232 TXD line or RS422 TX- line
Serial Port D: RS232 CTS line or RS422 RX+ line	I	CTSD/RXD+	A14	B14	RXDD/RXD-	ı	Serial Port D: RS232 RXD line or RS422 RX- line
Signal Ground		GND	A15	B15	-		Reserved
Reserved		-	A16	B16	-		Reserved
Serial port B TXD line	0	TXDB	A17	B17	CTSB	ı	Serial port B CTS line
Serial port B RXD line	ı	RXDB	A18	B18	RTSB	0	Serial port B RTS line
CAN1 port CAN-H line	I/O	CAN1H	A19	B19	CAN1L	I/O	CAN1 port CAN-L line
CAN2 port CAN-H line	I/O	CAN2H	A20	B20	CAN2L	I/O	CAN2 port CAN-L line
Factory use only, must be left open		FUO	A21	B21	-		Reserved
Signal Ground		GND	A22	B22	1PPSA	0	1 Pulse Per Second output A *3
Signal Ground		GND	A23	B23	1PPSB	0	1 Pulse Per Second output B *3
Signal Ground		GND	A24	B24	EVENTA	I	Event input A *4
Signal Ground		GND	A25	B25	EVENTB	I	Event input B *4
Configurable Logic-Level I/O 0 line	I/O	GPIO0	A26	B26	GPIO1	1/0	Configurable Logic-Level I/O 1 line
Configurable Logic-Level I/O 2 line	I/O	GPIO2	A27	B27	GPIO3	I/O	Configurable Logic-Level I/O 3 line
Signal Ground		GND	A28	B28	RESET_IN#	Ι	Active Low Reset input *5
Ethernet port TX+ line	0	LAN_TX+	A29	B29	LAN_TX-	0	Ethernet port TX- line
Signal Ground		GND	A30	B30	LAN_LED	0	Ethernet port control for external LED
Ethernet port RX+ line	I	LAN_RX+	A31	B31	LAN_RX-	Ι	Ethernet port RX- line
Active Low input for ON/OFF switch *7	Ī	ONOFFSW#	A32	B32	IRIG_OUT	0	IRIG port output line *6

<sup>\*1.</sup> Active Low input from the FN button of the MinPad. Must be left open if not

- \*5. Connect to ground to activate. Internal pull-up 2 kOhm to +3.3V.
- \*6. AM sine-wave signal; 2.1Vp-p (Mark), 0.7Vp-p (Space).
- \*7. Active Low input which is equivalent to ON/OFF button of the MinPad. The pin must be connected to

GND permanently if the board is required to turn on automatically any time external power is applied to pins A2 and B2.

<sup>\*2.</sup> LED1\_GRN and LED1\_RED are used to control the STAT LED of the MinPad. LED2\_GRN and LED2\_RED are equivalent to the REC LED of the MinPad. The output is a +3.3V driver in series with 100 Ohm resistor for each LED. LEDs should be with common cathode.

<sup>\*3.</sup> Voh>1,8V at 50 Ohm load.

<sup>\*4.</sup> Internal pull-up 5 kOhm to +3.3V

### TRE-QUATTRO OEM

#### **Tracking Features**

- Total 864 channels: all-in-view
- GPS C/A, P1, P2, L2C (L+M), L1C(I+Q)
- Galileo E1(B+C)
- GLONASS C/A, P1, P2, L2C
- QZSS C/A, L2C (L+M), L1C(I+Q), SAIF
- BeiDou B1,B1R, L1C(I+Q)
- SBAS L1
- Advanced Multipath Reduction
- Fast acquisition channels
- High accuracy velocity measurement
- · Almost unlimited altitude and velocity (for authorized users)

#### **Data Features**

- Up to 20 Hz update rate for real time position and 100 Hz raw data (code and carrier)
- 10 cm code phase and 1 mm carrier phase precision
- IEEE 1588 protocol support
- Hardware Viterbi decoder
- RTCM SC104 versions 2.x and 3.x Input/Output
- NMEA 0183 versions 2.x and 3.0 Output
- Code Differential Rover
- Code Differential Base
- · Geoid and Magnetic Variation models
- RAIM
- Different DATUMs support
- Output of grid coordinates

#### **Data Storage**

 Up to 16 GB of onboard non-removablememory for data storage

#### Input/Output

- Two high speed RS232 serial ports (up to 460.8 Kbps)
- Two high speed RS232/422 serial port (up to 460.8 Kbps)
- High speed USB 2.0 device port (480 Mbps)
- Full-duplex 10BASE-T/100BASE-TX Ethernet port
- Two CAN 2.0 A/B ports
- IRIG timecode output
- Two 1 PPS outputs synchronized to GPS, GLONASS or UTC
- Two Event Marker inputs
- MinPad interface: Four external LED drivers, ON/OFF control and External Command inputs
- Four Configurable Logic-Level GPIO ports

#### **Electrical**

- On-board power supply accepts any unregulated voltage between +6 to +40 Volts
- Keep-Alive Power input accepts any unregulated voltage between +4.5 to +40 Volts
- The central pin of each of the antenna connectors outputs
- +5VDC (the sourced current is 0.12 A max) to power an LNA
- Power consumption: 7.2 Watt


#### **Environmental**

- Operating Temperature: -35°C to +75°C
- Storage Temperature: -40°C to +85°C
- · High shock and vibration resistance

#### **Physical**

- Dimensions: 100x120 mm
- Weight: 130 g
- Digital connector: 64-pin DIN41612 type B Right Angle, AMP p/n 536052-5.
- RF connectors: MMCX Jack, edge mount, AMPHENOL, P/N 908-22100
- J101, J102, J103, J104 are GNSS antenna input connectors.

### TRE-QUATTRO OEM

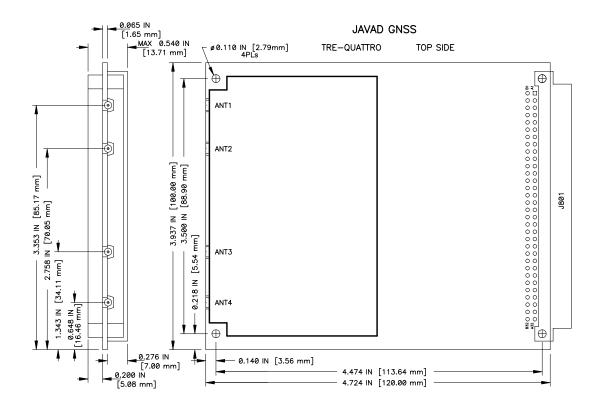



Specifications are subject to change without notice